

**Wireless  
Barcode Scanner  
User's Manual**

V9.2.1

## CONTENTS

Introduction.....	1
Copyright.....	1
Responsibility Clause.....	1
<b>Part one : Receiver Setting</b>	
1.1 Setting steps .....	2
1.2 Link scanner.....	2
1.3 Receiver default.....	2
1.4 Working mode .....	3
1.5 Interface selection.....	5
1.6 Baud rate .....	6
1.7 Parity check.....	8
1.8 Control flow.....	11
1.9 Keyboard language.....	12
1.10 Terminal .....	16
1.11 Receiver beeper tone .....	18
1.12 Power setting.....	21
1.13 Data transfer warning tone.....	23
<b>Part two: Scanner Setting</b>	
2.1 Scanner and receiver default setting	24
2.2 Scanner beep tone.....	27
2.3 Reading mode.....	30

## Introduction

This user manual is designed for wireless barcode scanner. For detailed user manual information, please download the complete user manual from our website or obtain it from our distributor.

## Copyright

All right reserved by our company, reprint, copy or sales of this manual are forbidden without our company permission.

## Responsibility Clause

We are not responsible for errors, omissions and variation without notice.



Start

## Part one: Receiver Setting

### 1.1 Setting steps

1. scan “start ”
2. scan function code you need
3. scan “end”

### 1.2 Link scanner

Just need to scan the “link scanner” barcode on receiver.

### 1.3 Receiver default

Tips: scan follow “receiver default “ barcode directly.



XL\$RST|  
Reset

“ \* “ denotes default setting.



End

#### 1. 4 Working mode

Tips: No need to scan “start”, “end”, just scan follow setting barcode directly.

##### Auto mode

Data won't be lost when no signal. Data will be transfer to receiver when signal recover.



XL\$AUT|  
\*AUTO

##### Immediately mode

Data transfer to receiver immediately after each scan. Data will lost immediately when no signal.



XL\$IMT|  
Immediately



Start

#### Inventory mode

All data be transferred to Flash memory after each scan.

Scan follow "out" barcode, all data be transfer to receiver.

Scanner will be in "AUTO" mode automaticly when all data transfer well.



XL\$IVT|

Inventory



XL\$OUT|

OUT

Note: the above inventory mode, AUTO mode only provided with a storage mode.



End

### 1.5 Interface selection



PT02|

USB / KB mode



PT01|

RS232 mode



Start



PT00|  
\*Auto choose

Receiver Tips: one beep means KB/USB mode, two beeps means RS232 mode.

1.6 Baud rate



BD03|  
4800



End



BD04|  
\*9600



BD06|  
19200



Start



BD10|  
115200

1.7 Parity check



UC01|  
\*None

8



End



UC02  
Even



UC03  
Odd



Start



UC05|  
Space



UC04|  
Mark



End

### 1.8 Control flow



CR00|

\*CTS/RTS OFF



CR01|

CTS/RTS ON



Start

### 1.9 Keyboard language



SL01|  
\*USA



SL02|  
French



End



SL04|  
UK



SL03|  
German



Start



SL05j  
Turkey-Q



SL06j  
Danmark



End



SL08|  
Spanish



SL09|  
Italy



Start

### 1.10 Terminal



TE01|  
None



TE03|  
\*Enter (0X0D)



End



TE04  
Space (0X20)



TE05  
CTRL + S (0X13)



Start



TE02  
Tab (0X0A+0X0A)

### 1.11 Receiver beeper tone



BK001  
Mute



End



BK01|  
\*On



BP01|  
Low



Start



BP021  
Medium



BP031  
\*High

20



End

### 1.12 Power setting

Scanner power setting



PS06|  
\*+10dB



PS09|  
+20dB



Start

Receiver power setting



PM06j  
\*+10dB



PM09j  
+20dB

Note: scanner and receiver must be in same power.



End

### 1.13 Data transfer warning tone

OFF: scanner will no "beep" after transfer successfully

ON: scanner have one "beep" after data transfer successfully



ST001  
\*OFF




ST011  
ON

## Part two: Scanner Setting

### 2.1 Scanner and Receiver default setting

Tips: scan follow 6 steps one by one.

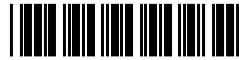

a. start



b. Reset




c. RS232 mode



d. End

the "LINK SCANNER"  
barcode on receiver

e. Link scanner

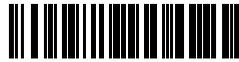

XL\$RST|  
f. Receiver default

## 2.2 Scanner beep tone

Tips: "Start" → Choose the "Beeper Tones"  
→ "End"



Start



Mute



Low




\*Medium

28



High

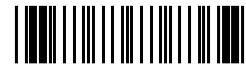

End

## 2.3 Reading mode

Tips: "Start"→Choose the"Scan Mode"→  
"End"



Start



\*Trigger




Auto trigger



Flash mode



Testing mode

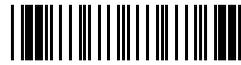

End

32